



# BRAKELINE HOSE KITS

- Easy Quick-fit
- Fully Stainless
- Strong Braided Hose

Trailparts new fast-to-fit banjo brakeline hose kits don't require any expertise or fancy tools to fit, and are stainless steel throughout so suitable for every job. They are designed to be a plug and play system, and really are the business, letting you – and your high paid staff – get on with running yours.

**14MM SPANNER**

**ALL YOU NEED TO INSTALL BANJO BRAKE LINES**

## Hose lengths & accessories

Hoses	Part Number	Hoses	Part Number
1m hose	BBB1000	4m hose	BBB4000
1.5m hose	BBB1500	4.5m hose	BBB4500
1.75m hose	BBB1750	5m hose	BBB5000
2m hose	BBB2000	5.5m hose	BBB5500
2.5m hose	BBB2500	6m hose	BBB6000
3m hose	BBB3000	7m hose	BBB7000
3.5m hose	BBB3500	8m hose	BBB8000
Accessories	Part Number	Accessories	Part Number
Single Banjo bolt 3/8"	B3183	P-clip with bolt	E7105
Double Banjo bolt 3/8"	B3183D	Grommet 4-5mm	Z6797
Copper washer	B3197		

## Fixings made easy

Banjo brake hoses have been design to simplify the routing and fixing process. Our strong braided lines can be run along the chassis internally using the 5-4mm Grommets for weather sealing, or externally using P-clips.

The rest will just bolt together using just a 14mm spanner.



## Braided hose


Banjo brake hoses are braided to ensure strength and reduce damage.

All hoses are ready to install regardless of whether its a single or double bolt with a universal banjo fitting each end.



## Single braked axle - Option 1


- x2 Banjo Banjo braided hose
- x2 Single Banjo bolt
- x1 Double Banjo bolt
- x7 Copper Washer

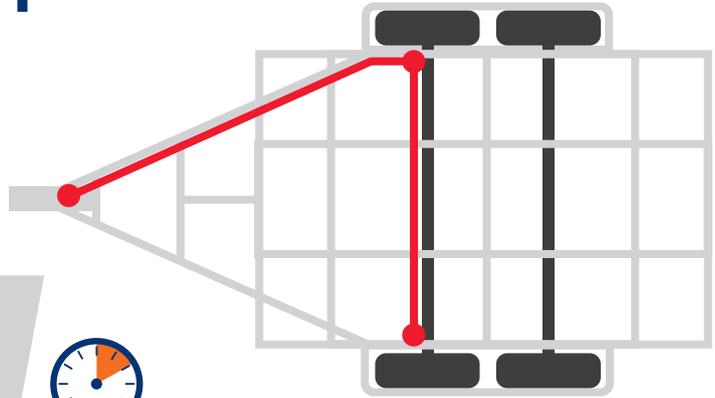

Approx. Install Time

## Single braked axle - Option 2


- x2 Banjo Banjo braided hose
- x2 Single Banjo bolt
- x1 Double Banjo bolt
- x7 Copper Washer

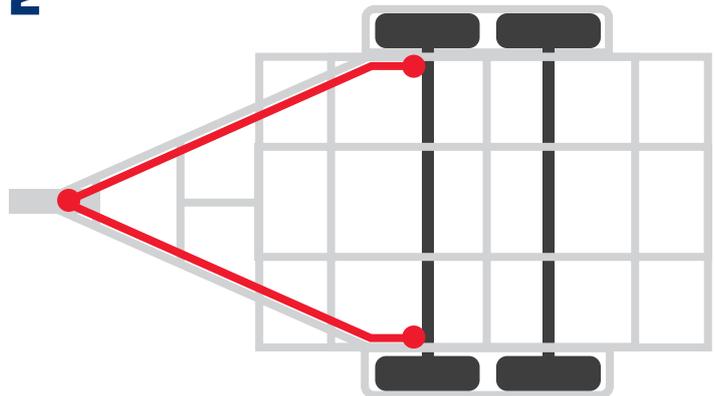

Approx. Install Time

## Tandem braked axles

- x4 Banjo Banjo braided hose
- x2 Single Banjo bolt
- x3 Double Banjo bolt
- x13 Copper Washer

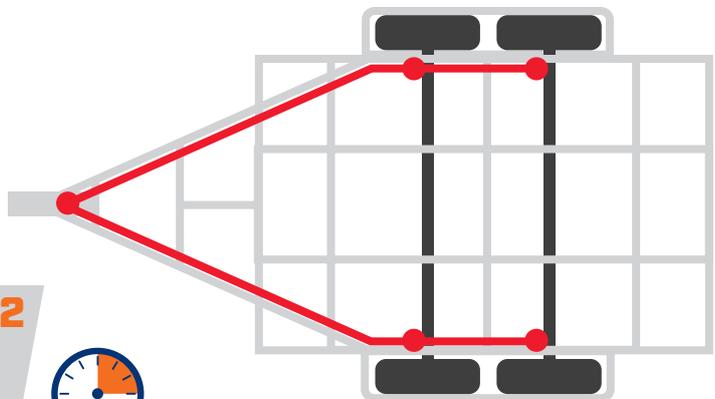

Approx. Install Time

